

 **KERFKORE**  
Flex Education Series  
Econokore®  
Double Layer  
Framework Construction

# Econokore® Double Layer Framework Construction

(Econokore and Bendable Plywood) or (Econokore and Econokore)

## Step 1

Use traditional methods to construct framework and attach a sheet of bendable plywood.




## Step 2

Reinforce the plywood to the frame.



## Step 3

Hold material in place until glue sets.

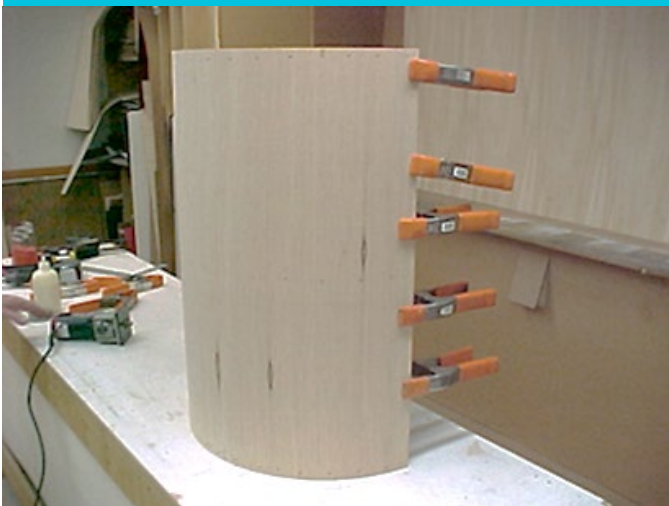

## Step 4

Use a router to remove excess material.



## Step 5

Apply PVA/Wood glue to the back side of the Econokore panel and attach to the plywood panel.



## Step 6

Use traditional methods to reinforce Econokore attachment.



## Step 7

Hold in place until dry.  
Use a router to remove excess material.



## Step 8

Econokore will cover all plywood imperfections, providing a smooth, paint-grade surface.

