

 **KERFKORE**

Flex Education Series

Econokore®

Double Layer

Removeable Framework

Econokore® Double Layer

Removable Framework Construction


Step 1

Construct a predetermined framework to create the desired radius.



Step 2

Form or wrap the first panel of Econokore to the framework with ribs facing outward.

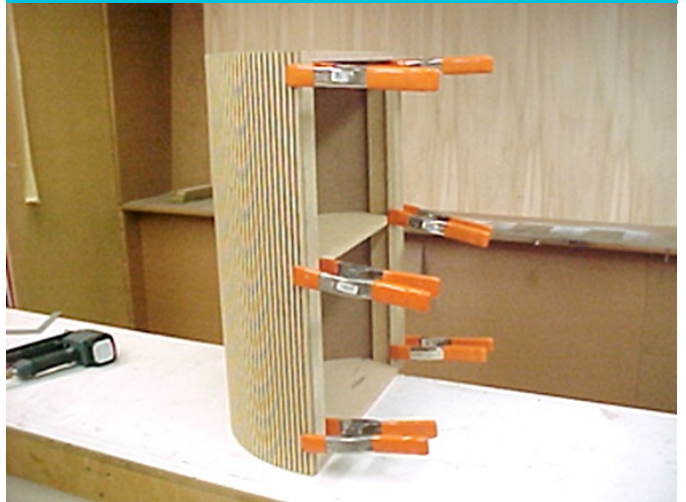


Step 3

Cover top Econokore panel with PVA/Wood glue. (Back Side)



Step 4

Attach top Econokore panel to the first panel. The backs of each panel should face one another. Clamp into position until dry. Follow traditional fabrication techniques.

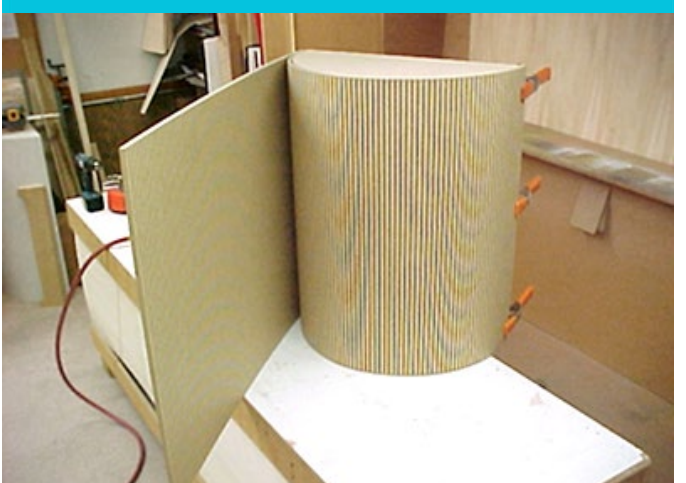

Step 5

Release clamps and remove for free-standing shape.
(Alternate method to vacuum pressing)

