 **KERFKORE**
Flex Education Series
Econokore®
Laminating Guide

Econokore® Laminating

Step 1

Apply contact adhesive to the back of laminate.



Step 2

Apply contact adhesive to Econokore.




Step 3

Evenly match the laminate to the Econokore panel and use a J-Roller to smooth all areas until securely covered.



Step 4

Use a router to smooth all edges.

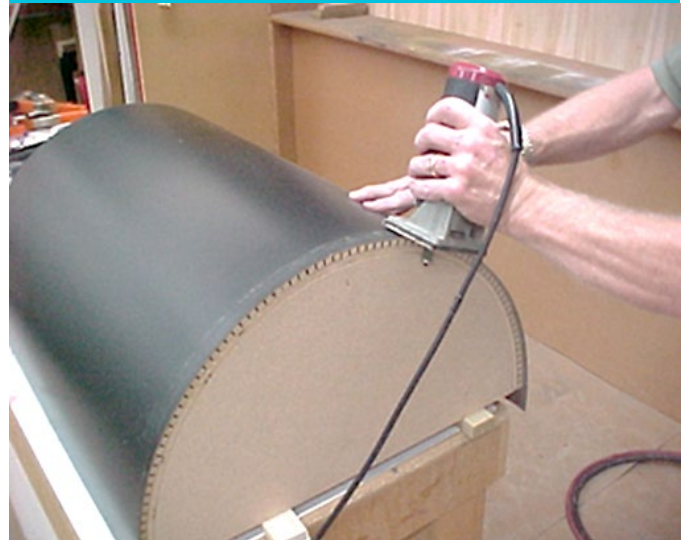

Step 5

Results

