


 **KERFKORE**
Flex Education Series
Econokore®
Single Layer Free Standing
(Poplar Back)

Econokore® Single Layer Free-Standing (1/8" Poplar Back Applied)

Step 1

Same procedures as Econokore with high density overlay.
(Example uses a 1/8" poplar skin that matches 1/8" poplar face on the Econokore)

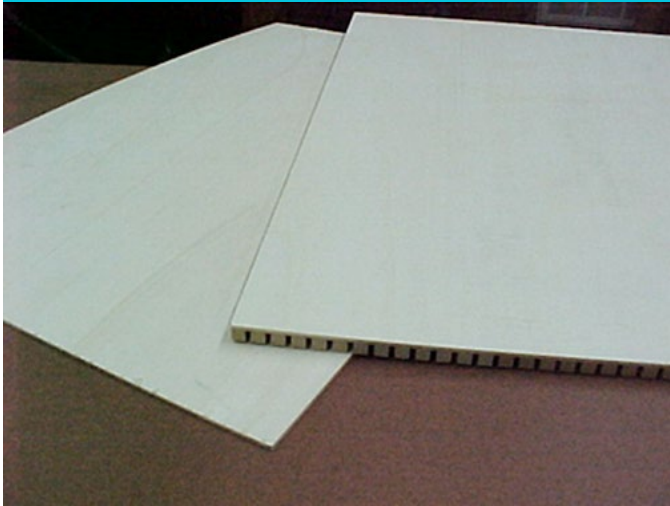


Step 2

Apply PVA/Wood glue to back side.



Step 3

Insert over form.

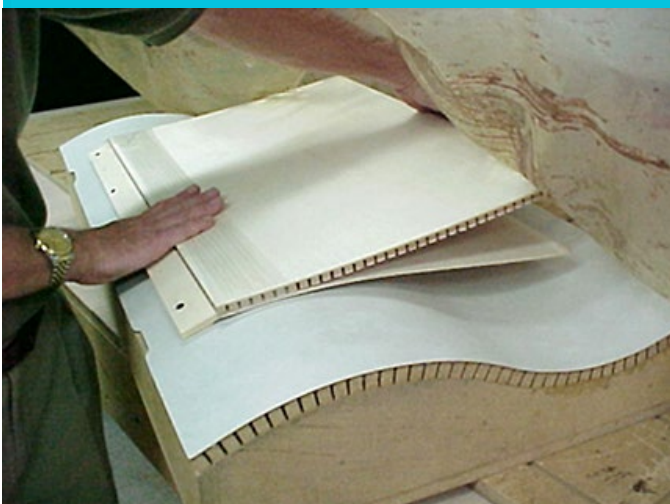

Step 4

Use vacuum press, straps or reverse forms to hold shape until dry.



Step 5

Results

