

 **KERFKORE**  
Flex Education Series  
Econokore®  
Single Layer Framework

# Econokore® Single Layer Framework Construction

## Step 1

Construct the framework. (Due to the smoothness and lack of flat spots, minimal framework is required.)  
Horizontal ribbing is preferred.




## Step 2

Machine necessary cuts on backside of panel.



## Step 3

Apply PVA/Wood glue on areas that will be attached to framework.

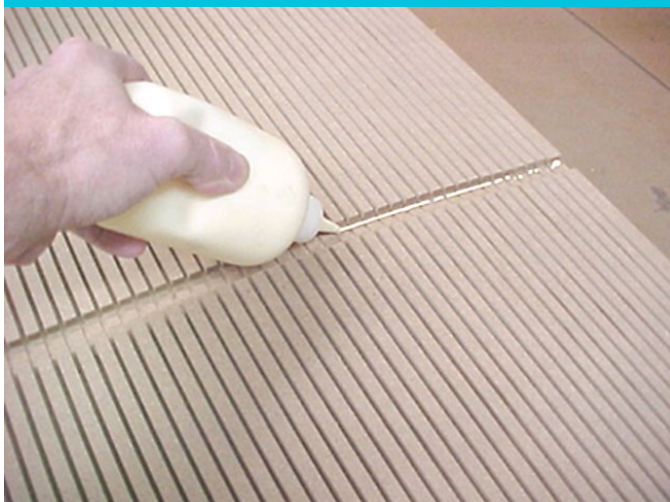

## Step 4

Attach Econokore panel to framework.



## Step 4

Hold in place using clamps or other preferred methods.




## Step 5

Staples can be applied along framework top to assist in holding the panel.



## Front View

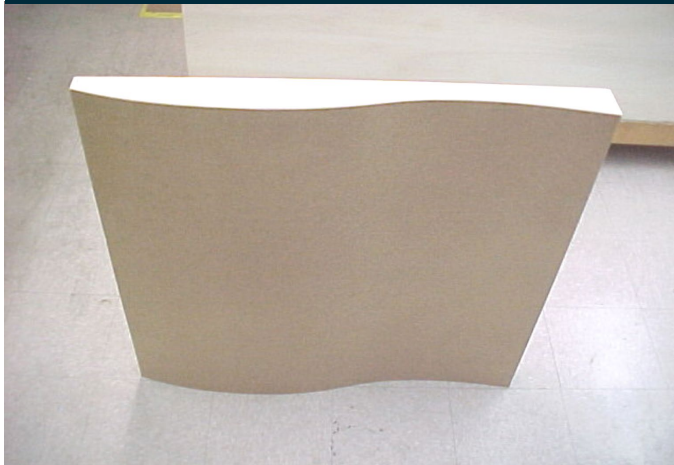

## Back View

