

 **KERFKORE**

Flex Education Series


Econokore®

Single Layer Free Standing
(Laminate Both Sides)

Econokore® Single Layer Free Standing (Laminate Both Sides)


Step 1

Requires a single layer of ¼” or ⅛” Econokore and two sheets of laminate, veneer or metal.

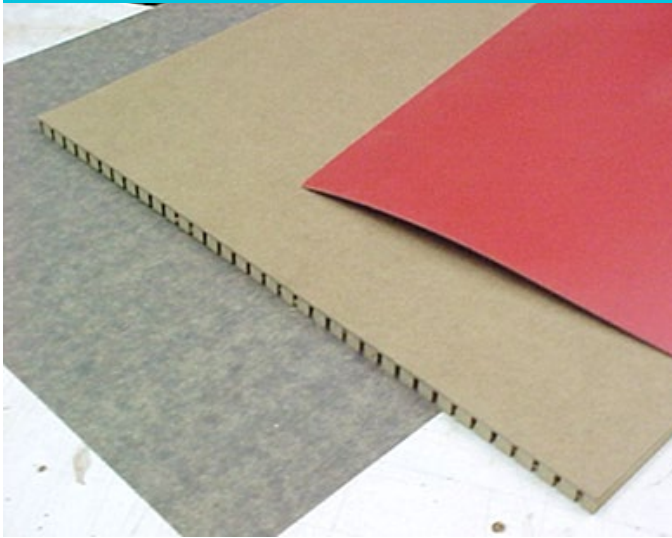

Step 2

Apply adhesive to panels, laminate and place over form.

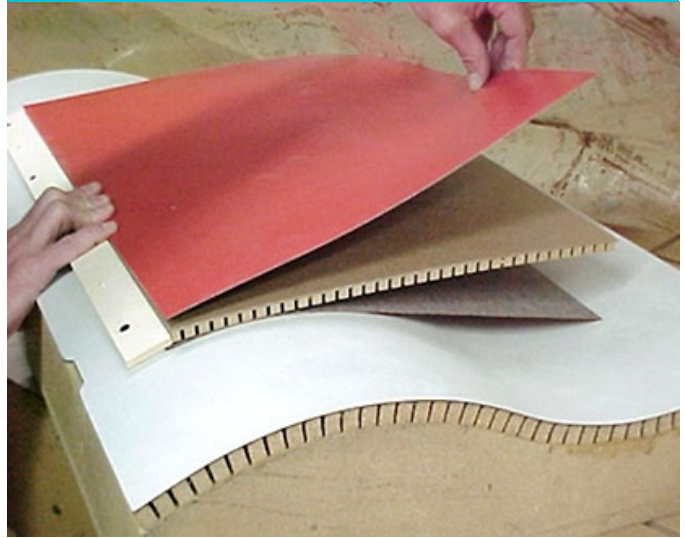

Step 3

Hold down using a vacuum press or straps until dry.



Step 4

Results

