

 **KERFKORE**
Flex Education Series
Flexboard®
Simple Door Construction

Flexboard® Doors


(Simple)

Various processes may be used to apply forming pressure: Vacuum Form, Support Ribs, Straps or Reverse Forms...

(Our example shows vacuum forms).


Step 1

Cut Flexboard to the size of the formed door.

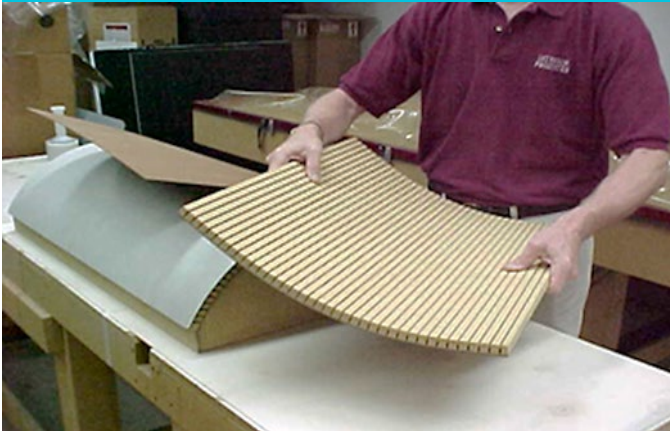

Step 2

Cut back panel to be slightly oversized. Material should match thickness and strength of face.

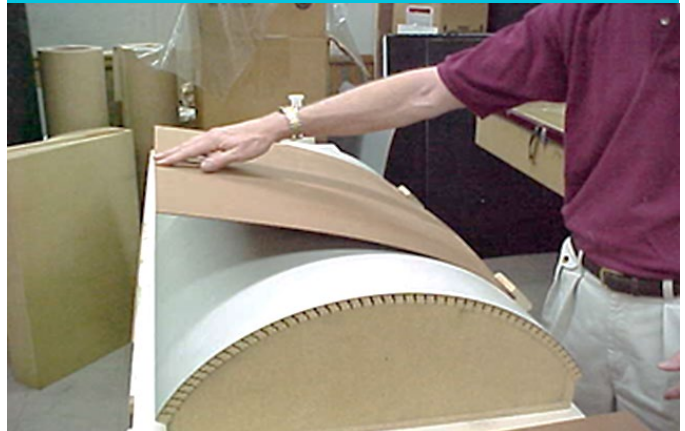

Step 3

Apply PVA/Wood glue evenly to back panel.




Step 4

Match the two panels together.



Step 5

Place over the form and prepare for pressing.

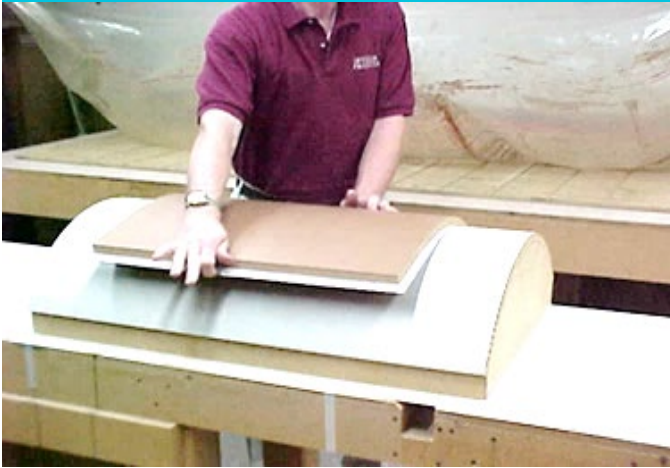

Step 6

Vacuum press until dry. (Other options: support ribs, straps or reverse forms)



Step 7

Remove from press.



Step 8

Use a router to apply final touches.



Step 9

Results

