


 **KERFKORE**
Flex Education Series
Kerfkore®
Column Construction

Kerfkore® Columns


Step 1

Outfit frame using horizontal ribs.

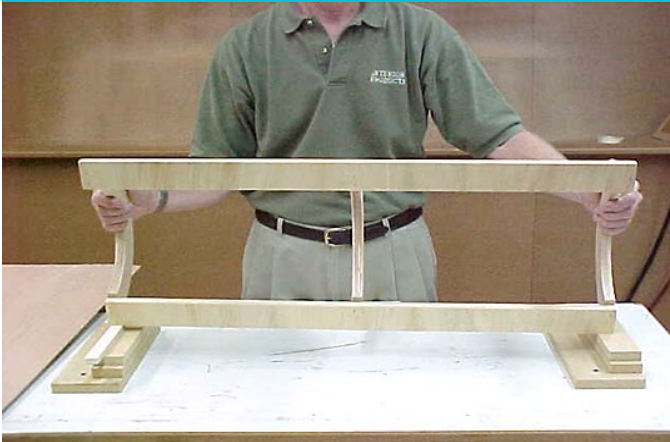

Step 2

Apply PVA/White glue adhesive outside face of horizontal ribs.

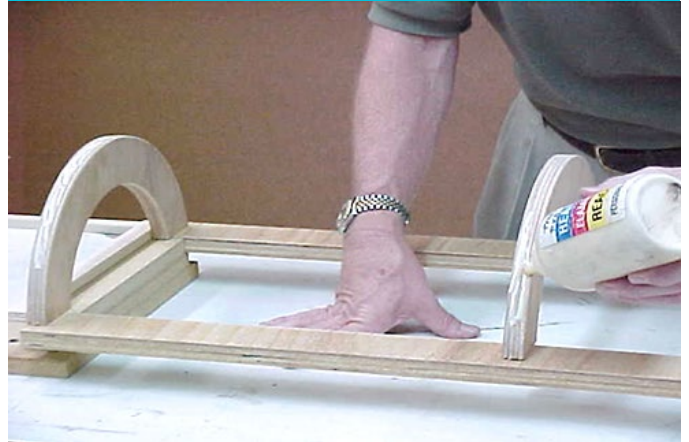

Step 3

Use a pre-sized, pre-laminated flat piece of Kerfkore and lay across the ribs using glue.

Optional: Attachment method includes placing a dado along the center ribs.

Kerfs should run vertical with the length of the column.



Step 4

Apply moderate pressure across the entire surface to ensure Kerfkore attaches to frame.



Step 5

Use hot melt along ribs to help hold in place until the PVA glue sets.



Step 6

Use a router to trim excess laminate.



Step 7

Completed half column.

