

 **KERFKORE**
Flex Education Series
Kerfkore®
Laminating Flat
(Different Substrates)

Kerfkore® Flat Lamination


(Combining Different Substrates)

Laminates are applied to Kerfkore and adjoining areas in the flat position prior to attachment to the structure.

Kerfkore does not need to be the same thickness as the rest of the structure. Difference in the thickness will show up on the inside of most structures.

Step 1

Maintain 1/8" spacing between pieces.

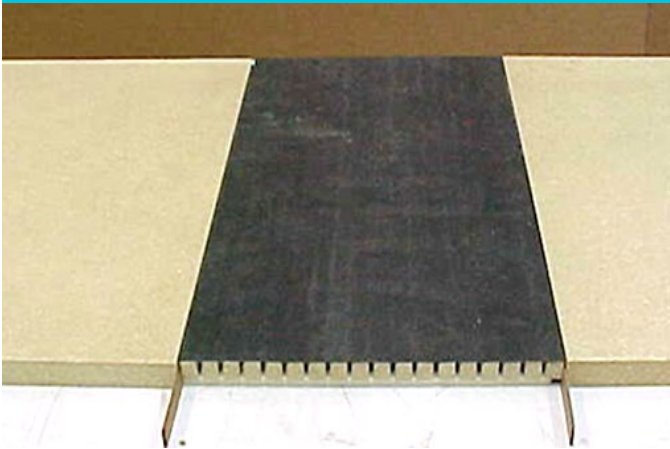


Step 2

Apply adhesive to both the laminate and Kerfkore substrate.



Step 3

Apply laminate to Kerfkore.
Optional: Use of vinyl blades for positioning of material.

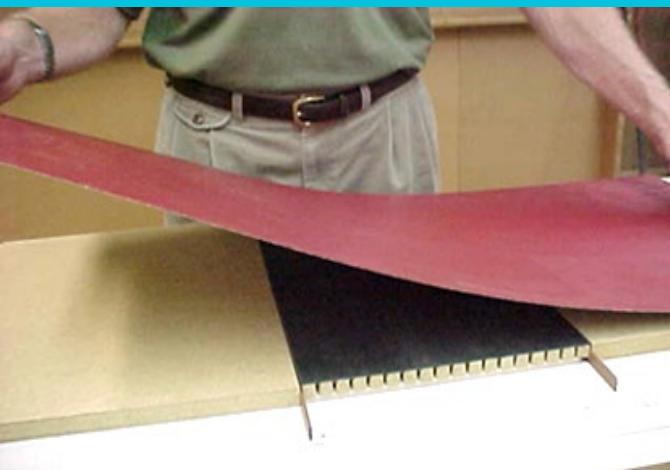

Step 4

Apply pressure to laminate to insure good adhesion.



Step 5

Trim edges using a router.



Step 6

Form to desired radius.

