 **KERFKORE**
Flex Education Series
Kerfkore®
Laminating Flat


Kerfkore® Flat Lamination

Laminates are applied to Kerfkore and adjoining areas in the flat position prior to attachment to the structure.

Kerfkore does not need to be the same thickness as the rest of the structure. Difference in the thickness will show up on the inside of most structures.

Step 1

Clean the surface by removing all dust and debris.

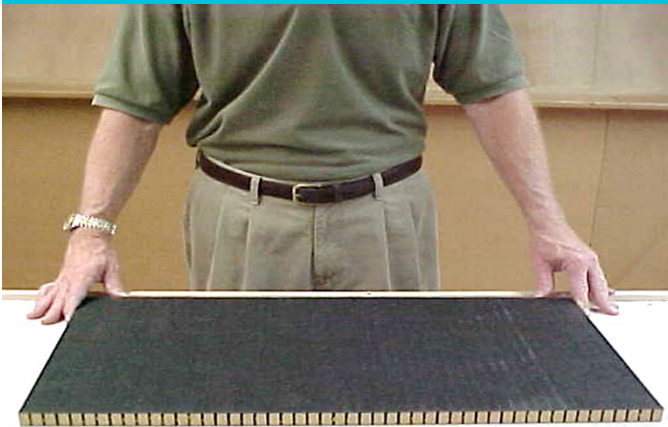

Step 2

Apply adhesive to both the laminate and Kerfkore substrate.




Step 3

Apply laminate to Kerfkore.
Optional: Use vinyl blades for positioning material.



Step 4

Apply pressure to laminate to insure good adhesion.

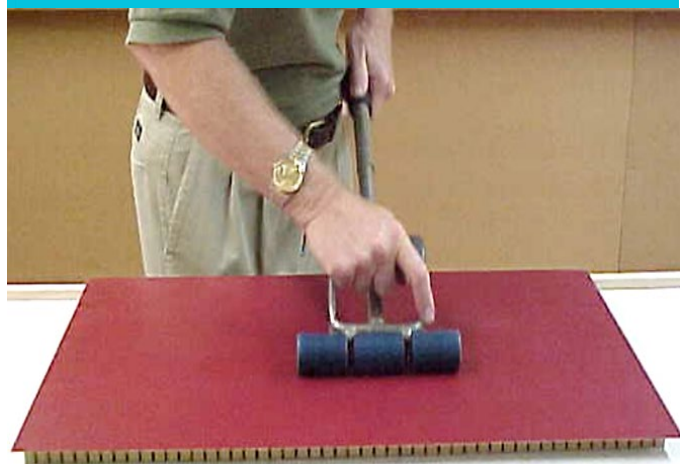

Step 5

Trim edges using a router.



Step 6

Finished Product.

