

 **KERFKORE**  
Flex Education Series  
Kerfkore®  
Seaming Methods  
(Flat Areas)

# Kerfkore® Seaming Methods


(On Flat Areas)

Laminates are applied to Kerfkore and adjoining areas in the flat position prior to attachment to the structure.

Kerfkore does not need to be the same thickness as the rest of the structure. Difference in the thickness will show up on the inside of most structures.


## Step 1

Extend laminate beyond Kerfkore to maintain consistent rib spacing.

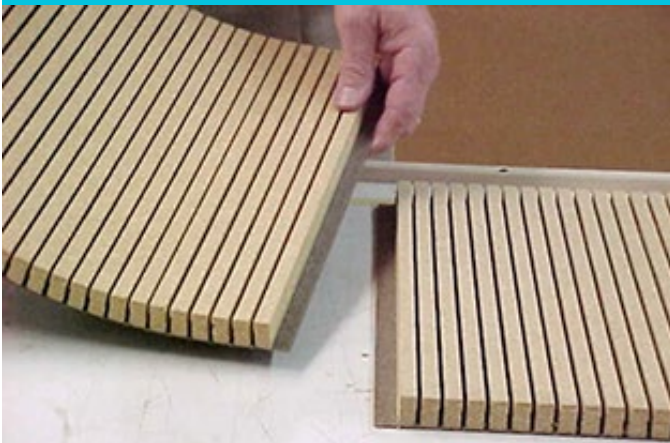

## Step 2

Butt or overlap and under scribe laminate seam.

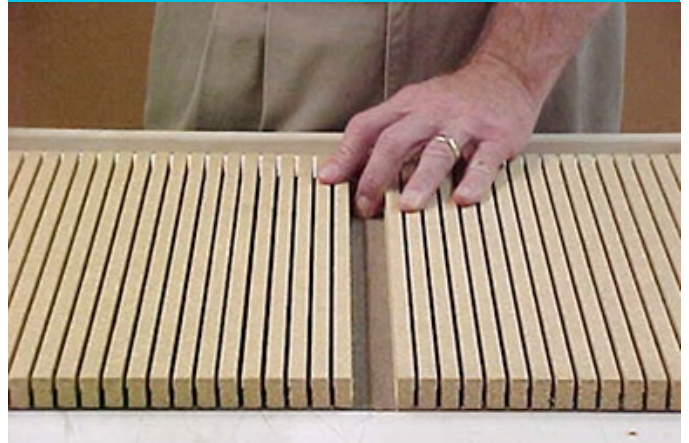


## Step 3

Cut a 3/4" wide seam rib from solid wood or particleboard. Apply adhesive to seam rib.



## Step 4

Place seam rib over seam, maintain a 1/8" gap on either side, press and hold.

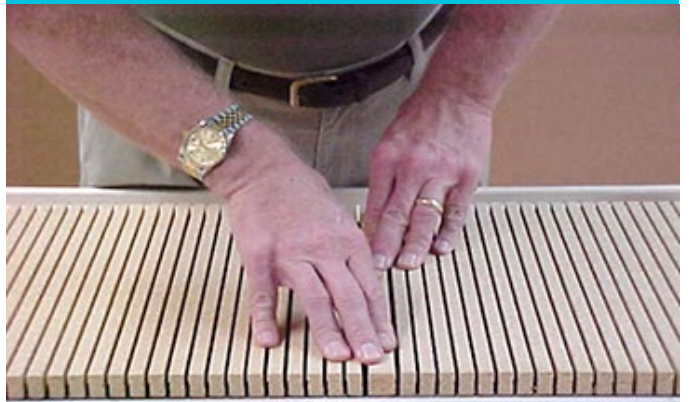

## Step 5

Splicing Complete

