

 **KERFKORE**
Flex Education Series
Kerfkore®
Splicing
(Without Fasteners, Width)

Kerfkore® Splicing Without Fasteners

(Additional Width)

Laminates are applied to Kerfkore and adjoining areas in the flat position prior to attachment to the structure.

Kerfkore does not need to be the same thickness as the rest of the structure. Difference in the thickness will show up on the inside of most structures.

Step 1

Never throw away Kerfkore scraps because they can be pieced together to form new material.



Step 2

Additional Width: Place panels side by side leaving 1/8" gap between them.


Tip: Use a piece of 1/8" hardboard as a temporary spacer to insure even and parallel spacing.



Step 3


Apply laminate to Kerfkore.

Optional: Use vinyl blades for positioning material

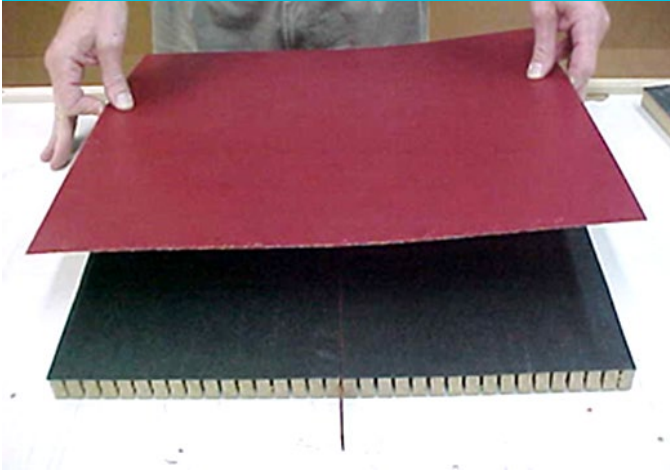

Step 4

Apply pressure to laminate to insure good adhesion.

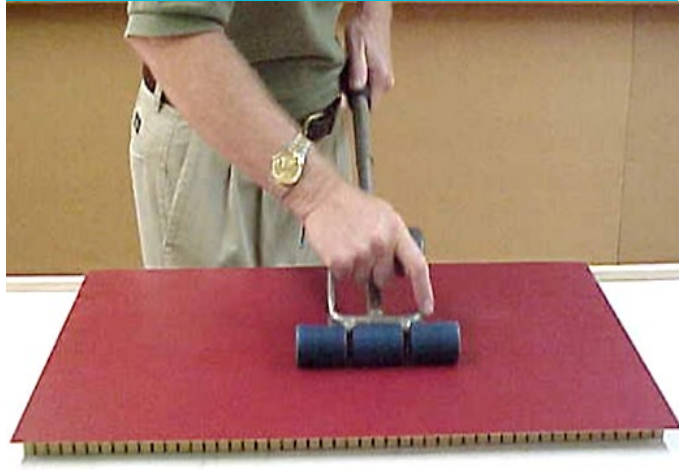

Step 5

Trim edges using a router.



Step 6

Finished Product

