

 **KERFKORE**
Flex Education Series
Timberflex
Attachment Methods

Timberflex Attachment Methods

(Continued from Fabrication Methods)

All vertical ribs should be set slightly back from the horizontal ribs so as not to interfere in the forming process.

Only attach to flush vertical rib when forming a seam.


Step 1

Use a blade to remove core ribs to allow a tight inset attachment to framework.



Step 2

Panel ready for inset attachment.
Optional: Dado

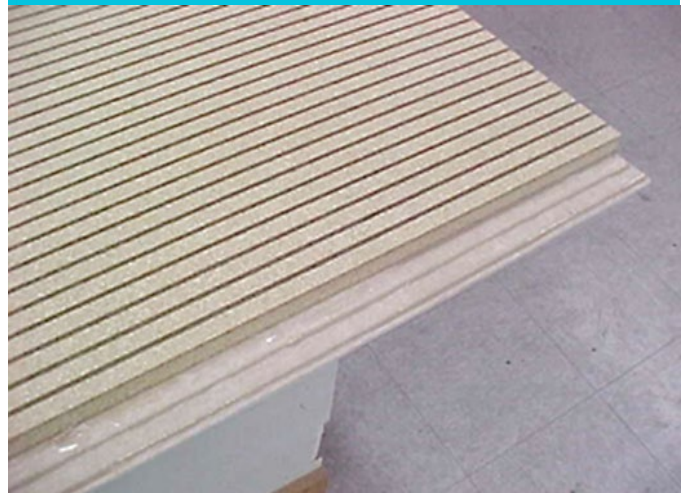

Step 3

Apply glue to horizontal ribs.




Step 4

Position the panel.




Step 5

Press the pre-sized and pre-cut panel to the framework.

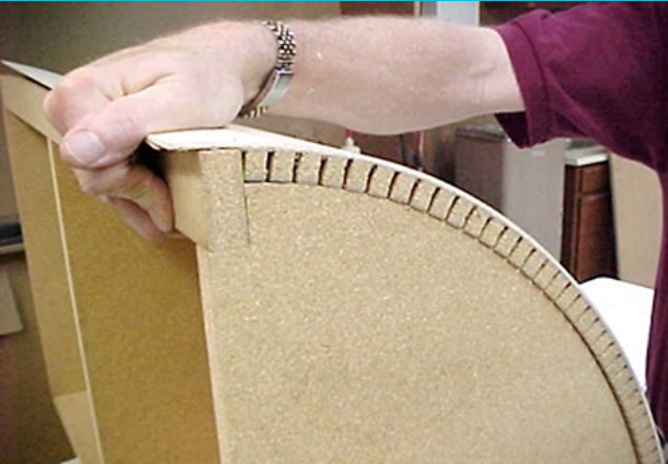

Step 6

Staple and clamp end to secure the attachment between panel and framework. Optional: Use a hot melt glue on the inside framework for securing material.

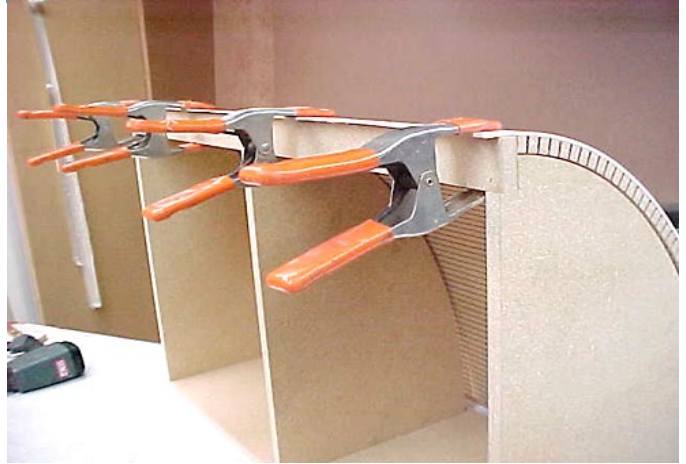

Step 7

Staples can be used on the outside face along ribbing. The face is now ready for covering.



Next Steps

See Timberflex Laminating