

 **KERFKORE**  
Flex Education Series  
Timberflex  
Simple Door

# Timberflex Doors


(Simple)

Various processes may be used to apply forming pressure: Vacuum Form, Support Ribs, Straps or Reverse Forms...

(Our examples show vacuum forms)


## Step 1

Cut Timberflex to the desired door size.

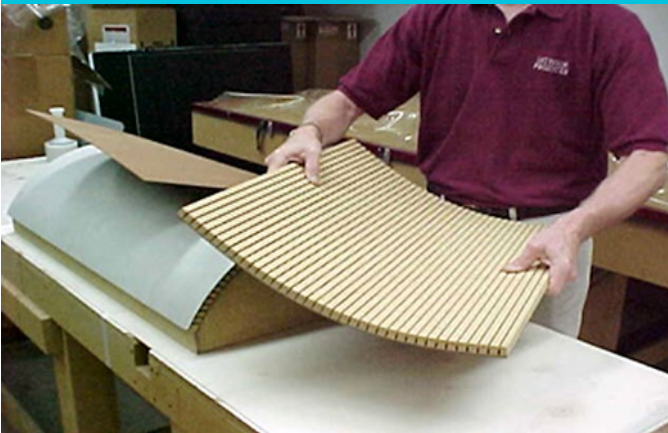


## Step 2

Cut the back panel slightly oversized. Material should match thickness and strength of the face.

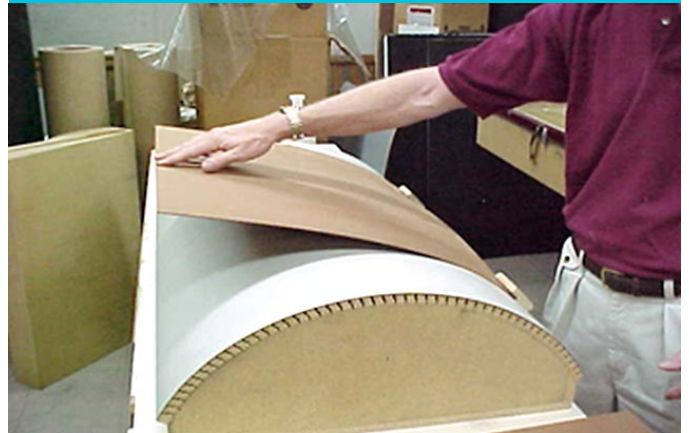

## Step 3

Apply PVA/Wood glue evenly to back panel.

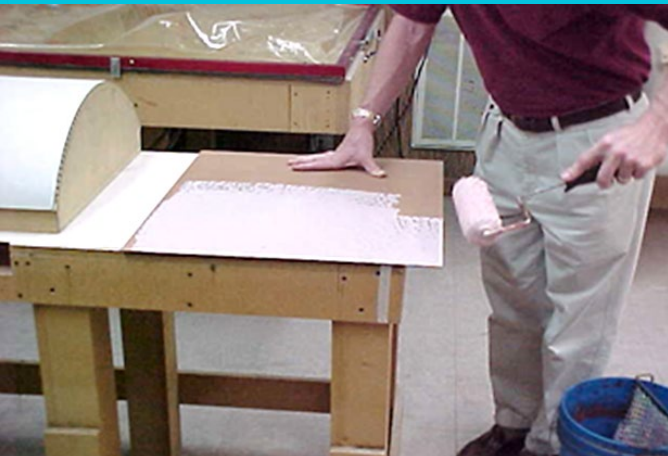

## Step 4

Match the two panels together.



## Step 5

Place over the form and prepare for pressing.



## Step 6

Vacuum press until dry. (Additional options: Support ribs, straps or reverse forms)



## Step 7

Remove from press.



## Step 8

Use a router to apply final touches.



## Step 9

Results

