

 **KERFKORE**
Flex Education Series
Timberflex
Laminating Guide

Timberflex Laminating

(Continued from Attachment Methods)

A wide variety of materials may be used to cover the face, such as Laminate, Veneer, Metal, Fabric, Leather, Other...

Step 1

Apply contact adhesive to face material and component.



Step 2

Attach face material to component.



Step 3

Ensure uniform adhesion with a J-Roller.




Step 4

Use a router to remove excess face material from edges.



Step 5

Apply contact adhesive to top of component and face material.

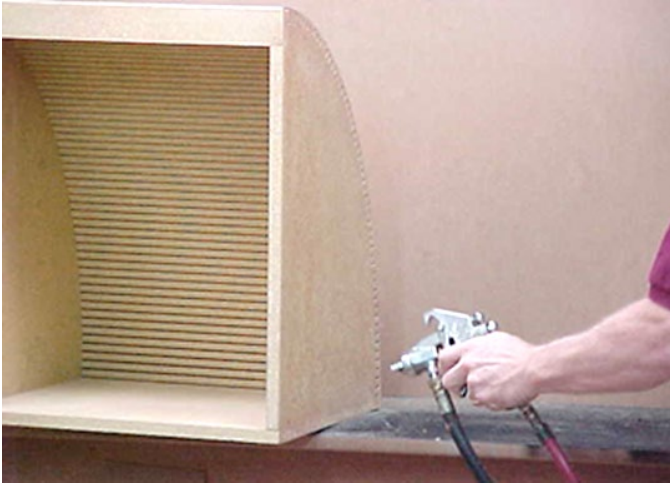

Step 6

Use a J-Roller to ensure uniform adhesion.



Step 7

Use a router to remove excess face material from edges.



Next Steps

Completed

