

OVERVIEW

- Double Layer can be Econokore and bendable plywood or Econokore and Econokore.
- For this example, we will be using Econokore and bendable plywood.
- Econokore will cover all plywood imperfections, providing a smooth, paint-grade surface.

PRO TIP:

Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid materials.

For an indepth guide to Econokore lamination, check out our Video Tutorial:



Let's get started!

1.



Use traditional methods to construct framework and attach a sheet of bendable plywood.

2.




Use clamps to hold material in place until glue sets.

3.




Use stapler to reinforce the plywood to the frame.

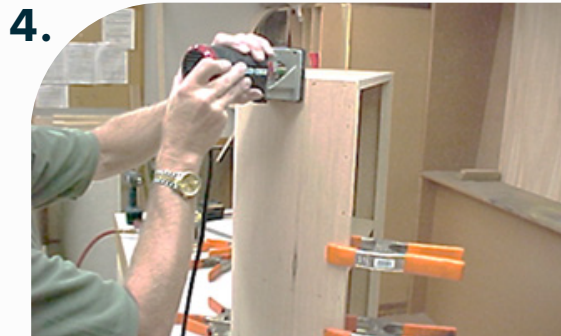

Use a router to remove excess material.



Apply PVA/Wood glue to the back side of the Econokore panel and attach to the plywood panel.

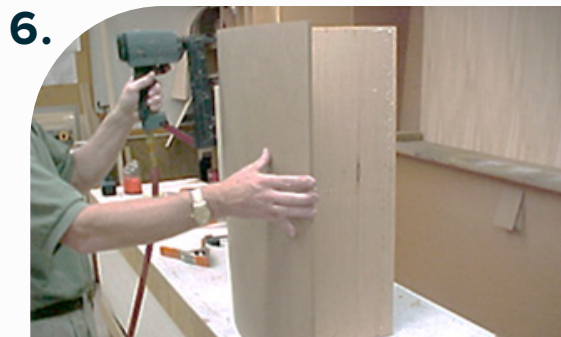

Use traditional methods to reinforce Econokore attachment.



Hold in place until dry. Use a router to remove excess material.



Results.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT ECONOKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[ECONOKORE SPEC SHEET](#)