

OVERVIEW

- This guide will show an alternate method to vacuum pressing.
- Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid materials.

PRO TIP:

Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid materials.

For an indepth guide to Econokore lamination, check out our Video Tutorial:



Let's get started!

1.



Construct a predetermined framework to create the desired radius.

2.




Form or wrap the first Econokore panel to the framework with ribs facing outward.

3.



Cover the second Econokore panel with PVA/Wood glue on the rib side.

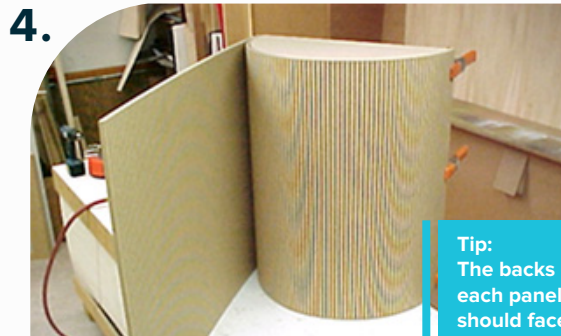

Tip:
The backs of
each panel
should face
one another.

Attach the top Econokore panel to the formed panel. Clamp into position until dry.



Release clamps and remove for free-standing shape.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT ECONOKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[ECONOKORE SPEC SHEET](#)