

OVERVIEW

- For this example, we are using 2 pieces of 3/8" Econokore.
- This guide will show the Econokore layers created in a vacuum form.

PRO TIP:

Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid materials.

For an indepth guide to Econokore lamination, check out our Video Tutorial:



Let's get started!

1.



Use two Econokore panels with back sides facing one another.


2.




Tip:
No need to fill the cuts between kerfs.

Apply PVA/Wood glue to the back of each panel making sure to evenly cover the surface.

3.

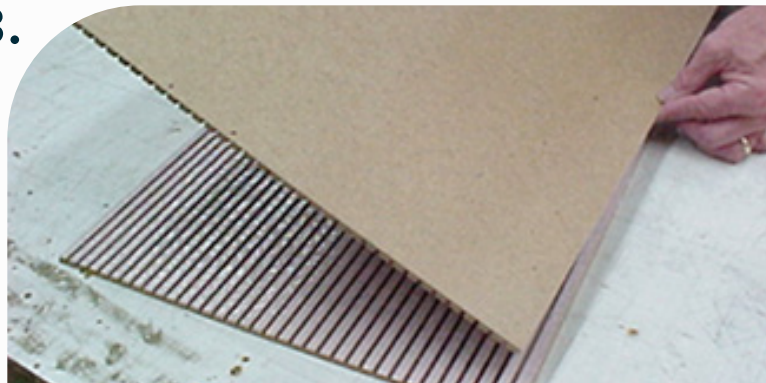

Position panels back to back.

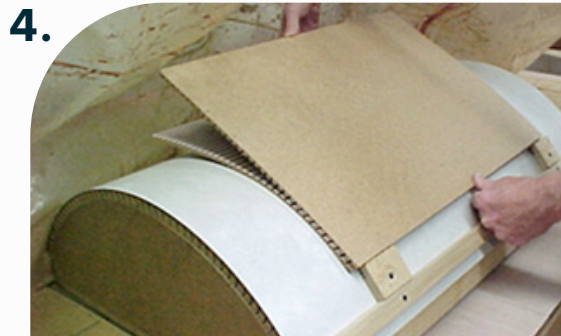

Place panels over the form and hold them in place using a vacuum press or straps until the glue has set.



Allow panels to set until desired radius is achieved.



Remove product from the form, notice rigidity and smoothness.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT ECONOKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[ECONOKORE SPEC SHEET](#)