

OVERVIEW

- This guide will show the Econokore Single Layer created in a vacuum form.
- Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid materials.

PRO TIP:

Use a vertical grade HPL. A horizontal grade HPL can be used, provided it will bend to the desired radius.

For decorative inspiration, check out our **Unique Finishes Blog:**



Fabricator Tip: Discover the Many Finishing Options for Kerfkore Products

Leather-looked columns, vertical stone feature walls, curved desks wrapped in metal. Fabricators bring finishing and decorating ideas to their Kerfkore architectural panels, choosing from a variety of decorative surfacing options to create eye-catching results. After all, our flexible and lightweight panels serve as a solid base for many different materials. You can easily apply veneers, high-pressure

[READ MORE](#)


Let's get started!

1.



Requires a single layer of Econokore and two sheets of the chosen decorative surface.

2.

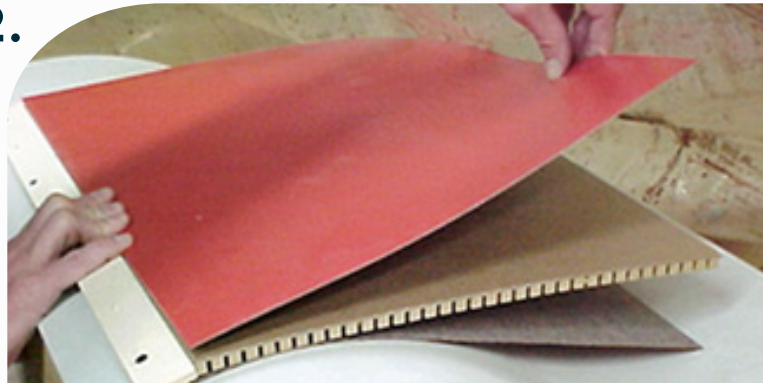


Apply adhesive to each side of the Econokore panel and the back sides of each laminate. Align your laminates and Econokore over the form.

3.



Hold down using a vacuum press or straps until dry.

4.

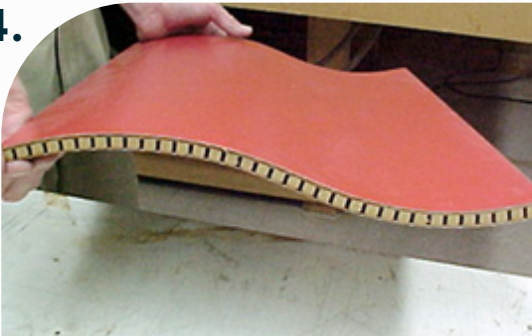

Results.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT ECONOKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[ECONOKORE SPEC SHEET](#)