

OVERVIEW

- For this example, we are using a 1/8" poplar skin that matches 1/8" poplar face on the Econokore.
- Same procedures as Econokore with high density overlay.
- This guide will show the Econokore Single Layer created in a vacuum form.

PRO TIP:


Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid.

For an indepth guide to Econokore lamination, check out our Video Tutorial:




Let's get started!

1.

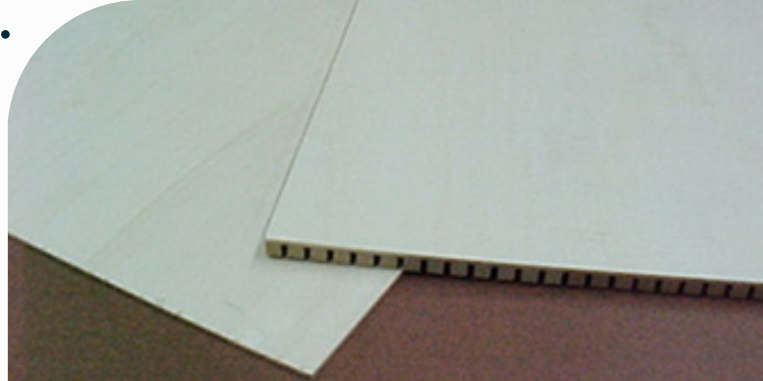

Requires a single layer of Econokore with poplar plywood face and one sheet of matching 1/8" poplar plywood.

2.

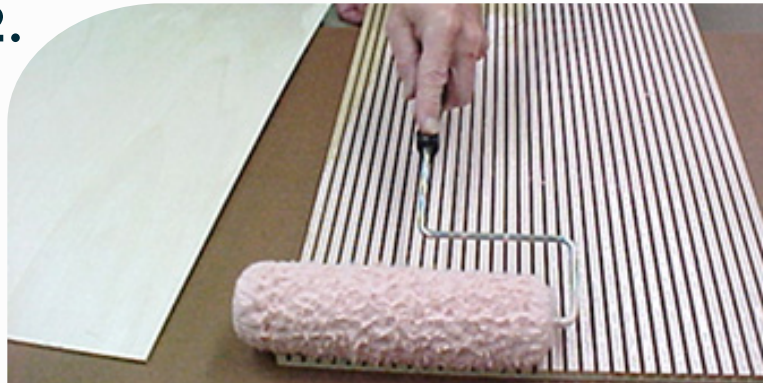

Apply PVA/Wood glue to back side of Econokore.


3.



Align your poplar plywood backing and Econokore over the form.



Use vacuum press, straps, or reverse forms to hold shape until dry.

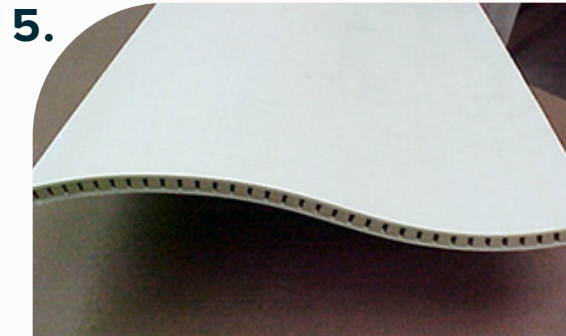

Results.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT ECONOKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[ECONOKORE SPEC SHEET](#)