

OVERVIEW

- All vertical ribs should be set slightly back from the horizontal ribs so they will not interfere in the forming of the material.
- Only attach to flush vertical rib when forming a seam.

PRO TIP:

Vertical ribs are only necessary for supporting and positioning the horizontal ribs. They are not needed for attaching Flexboard.

To learn how to attach Flexboard to the framework, see our guide:



Let's get started!

1.



Use traditional methods to construct the framework.

2.




Glue, screws and staples are all suitable for construction.

3.



To attach Flexboard, the framework should consist of horizontal ribs.

4.

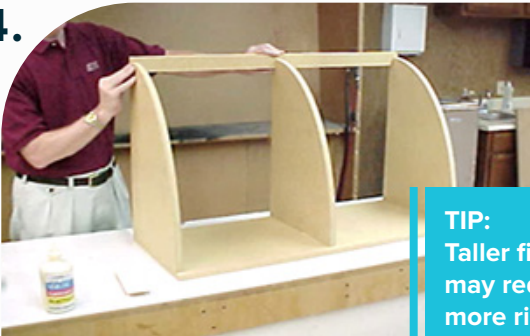

TIP:
Taller fixtures
may require
more ribs.

In most applications atleast three ribs are recommended.

5.



Results.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT FLEXBOARD](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[FLEXBOARD SPEC SHEET](#)