

## OVERVIEW

- All vertical ribs should be set slightly back from the horizontal ribs so they will not interfere in the forming of the material.
- Flexboard face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and other semi rigid surfaces.

## PRO TIP:

Use a vertical grade HPL. A horizontal grade HPL can be used, provided it will bend to the desired radius.

For a more indepth guide, check out our Video Tutorial:



## Let's get started!

1.




Clean the surfaces by removing all dust and debris.

2.



Apply contact adhesive to the Flexboard face and decorative surface material.

3.

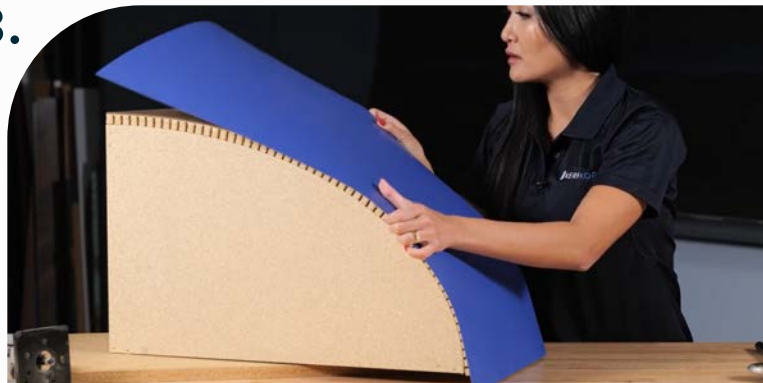

Attach decorative surface material to component.



Use a J-Roller to ensure uniform adhesion.



Use a router to remove excess material from edges.



Results.

**Congratulations!** Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT FLEXBOARD](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[FLEXBOARD SPEC SHEET](#)