

## OVERVIEW

- Veneers are applied to Kerfkore and the adjoining areas in the flat position.
- Kerfkore does not have to be the same thickness as the rest of the structure. The difference in the thickness will show up on the inside, not the outside of most structures.

## PRO TIP:

With the Kerfkore product, only use Two Ply, Phenolic Backed, or 20mil Paper Backed Veneers.

Check out our **FAQs** for more informaton about Kerfkore:



## Let's get started!

1.



Apply contact adhesive to the face material of the Kerfkore panel. Place in jig.

2.




Apply adhesive to back of veneer.

3.



Apply veneer to Kerfkore.

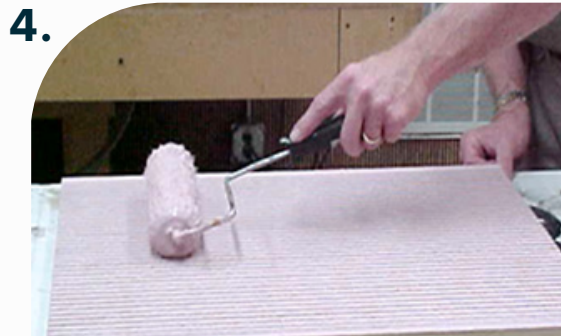

Spread a moderate coat of PVA/white glue on the ribbed/kerf side.




Place veneer face down on form. Then, place Kerfkore with glued rib side down onto veneer.



Optional:  
Can apply pressure through straps if vacuum not available.

Place under vacuum press.

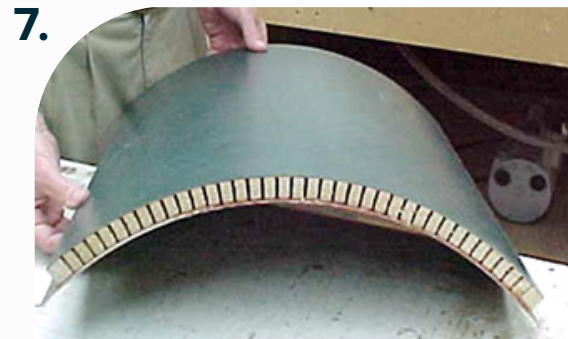

Completed door. Use a router to trim excess veneer. Edge band if specified.

**Congratulations!** Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT KERFKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[KERFKORE SPEC SHEET](#)