

OVERVIEW

- Apply decorative surface to Kerfkore and adjoining areas in the flat position prior to attachment to the structure.
- Kerfkore does not need to be the same thickness as the rest of the structure.
- Difference in the thickness will show up on the inside of most.

PRO TIP:

Acclimate Kerfkore to the same environment as the decorative surfacing materials. Two to three days recommended for conditioning.

For a more indepth guide, check out our **Video Tutorial:**



Let's get started!

1.



Clean the surfaces by removing all dust and debris.

2.



Apply adhesive to both the decorative surface and Kerfkore substrate.

3.



Optional:
Use vinyl blades for positioning material.


Apply decorative surface to Kerfkore.



Apply pressure to surface to ensure good adhesion.



Trim edges using a router.

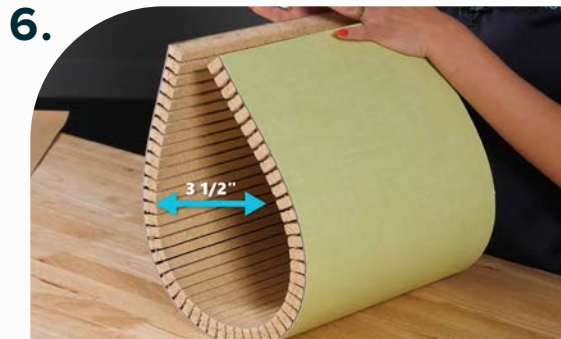

Finished product.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT KERFKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[KERFKORE SPEC SHEET](#)