

## OVERVIEW

- Decorative surfaces are applied to Kerfkore and the adjoining areas in the flat position.
- Kerfkore product does not have to be the same thickness as the rest of the structure. The difference in the thickness will show up on the inside, not the outside of most structures.

## PRO TIP:


Use a vertical grade HPL. A horizontal grade HPL can be used, provided it will bend to the desired radius.

**For a more indepth guide to attachment methods, check out our Attachment Guide:**



## Let's get started!

1.

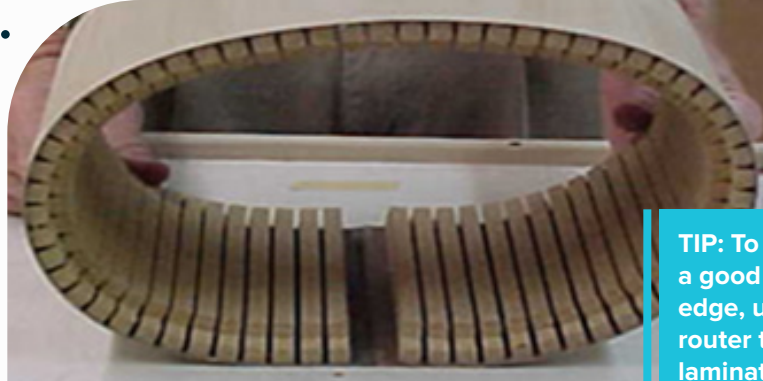

**TIP:** To obtain a good seam edge, use a router to trim laminate to 1/2".

Extend decorative surface beyond Kerfkore edge to maintain consistent rib spacing. Put decorative surface together and clamp in place.

2.




Cut a 3/4" wide seam rib using solid wood or particle board. Apply adhesive to seam rib.

3.



Press and hold. Maintain 1/8" spacing on either side.

4.

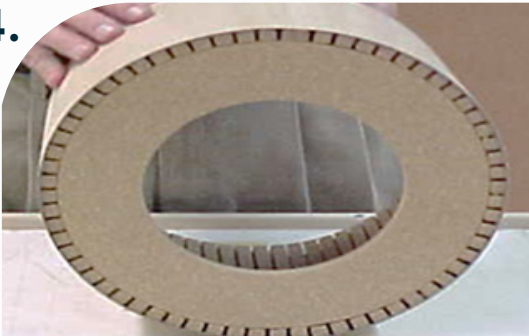

Insert horizontal rib for structure. Attachment methods can vary, see Attachment Guide for more information.

**Congratulations!** Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT KERFKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[KERFKORE SPEC SHEET](#)