

OVERVIEW

- All vertical ribs should be set slightly back from the horizontal ribs so they will not interfere in the forming of the material.
- Only attach to flush vertical rib when forming a seam.

PRO TIP:

Vertical ribs are only necessary for supporting and positioning the horizontal ribs. They are not needed for attaching Timberflex.

To learn how to attach Timberflex to the framework, see our guide:



Let's get started!

1.



Use traditional methods to construct the framework.

2.




Glue, screws and staples are all suitable for construction.

3.




To attach Timberflex the framework should consist of horizontal ribs.

Timberflex Framework Fabrication

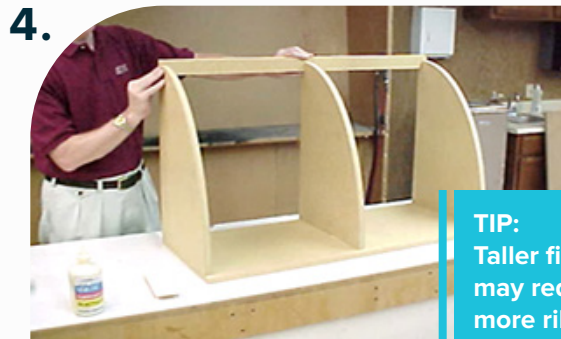

TIP:
Taller fixtures
may require
more ribs.

In most applications atleast three ribs are recommended.

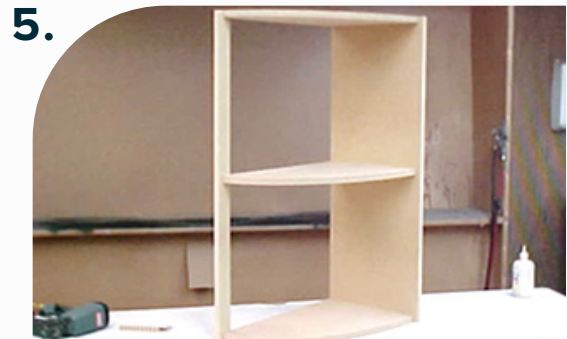

Results.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT TIMBERFLEX](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[TIMBERFLEX SPEC SHEET](#)