

**OVERVIEW**

- Decorative surfaces (or equal material) must be applied to both sides of the panel to avoid warping and create balance.
- Depending on the face material, painting and staining are great finishing options as well.

**PRO TIP:**

DO NOT use contact adhesives/petroleum based adhesives on the foam itself.

For a more indepth guide, check out our Video Tutorial:



**Let's get started!**

**1.**



Clean the surfaces by removing all dust and debris.

**2.**



Apply adhesive to both the decorative surface and Worklite.

**3.**



Optional:  
Use vinyl blades for positioning material.

Apply decorative surface to Worklite.




Apply pressure to surface to ensure good adhesion.




Flip the panel over to laminate other side. Clean the surfaces by removing all dust and debris.




Apply adhesive to both the decorative surface and Worklite.

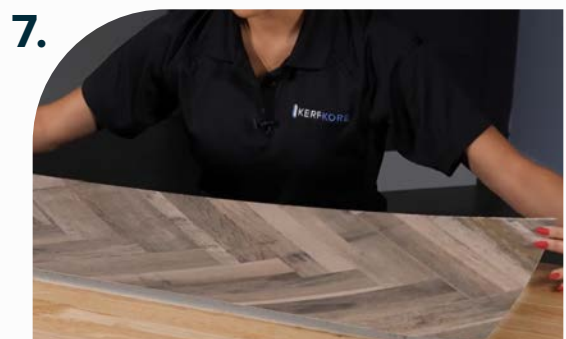

Apply decorative surface to Worklite.

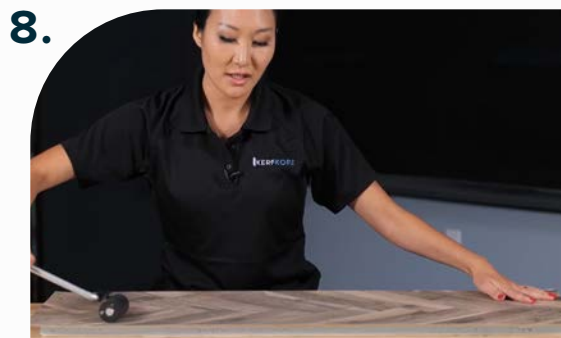

Apply pressure to surface to ensure good adhesion.

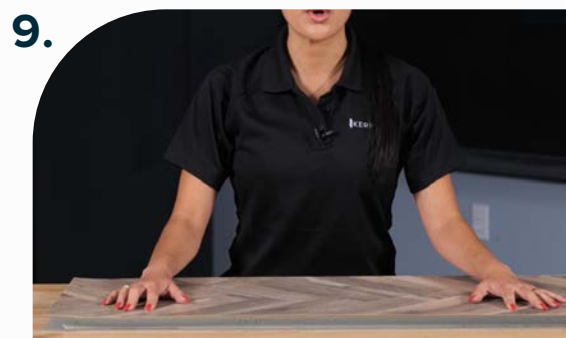

Both sides of Worklite panel are now laminated. This creates balance and avoids warping.

10.



Trim edges using a router.

11.



Results.

**Congratulations!** Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT WORKLITE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[XPS FOAMKORE SPEC SHEET](#)